

Commissioning and Configuration

What are the default username and password for the ABB-Welcome (M) IP Gateway (IPGW)?

Default username: admin

Default password: admin

After login in the first time using the default data, it is recommended to change the default username and password and creates your own.

Please take into account the following recommendations for the password (up version 3.40):

- Contains uppercase and lowercase letters (only a-z)
- has a minimum length of 10 characters
- contains at least one special character (!"§\$%&/()=?` ;: _><@€~)
- contains at least one number

Unique solution ID: #1419

Author: Carolina Bachenheimer-Schaefer

Last update: 2017-06-19 08:52