

Outdoor Stations

How to set unlock passwords of keypad at the outdoor station in Welcome M? How many digits are the passwords?


Enter the outdoor station menu to set unlock passwords.

below is detail about how to set password, and reset.

Set the door open password ON/OFF (default: 123456)

#* system password # =>


Access Control # => Door open code # => Enable/disable #

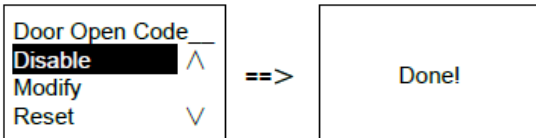

Modify the door open password

#* system password # =>


Access control # => Door open code # => Modify #

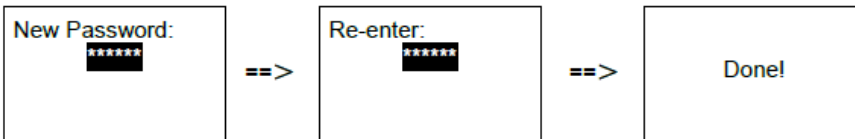

Reset the door open password

#* system password # =>

Access control # => Door open code # => Reset #

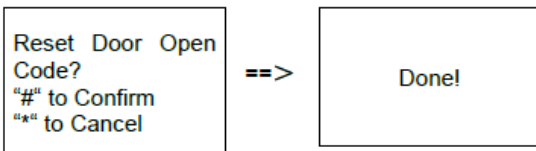

Or residents can set unlock passwords at their own indoor stations. Range: 3-8 digits.

Unique solution ID: #1090

Author: Leo-Yangeng.Li

Last update: 2017-03-07 09:15