

Outdoor Stations

When user inputs passwords at the outdoor station keypad module, which lock of outdoor station audio module will be unlocked in **Welcome M?**


Default lock will be unlocked, but we can change default lock to "Lock-GND" or "NO-NC-COM".

How to change default lock, pls see below detail.

Change default lock

Default lock can be set at either "Lock-GND" or "NO-NC-COM"

1

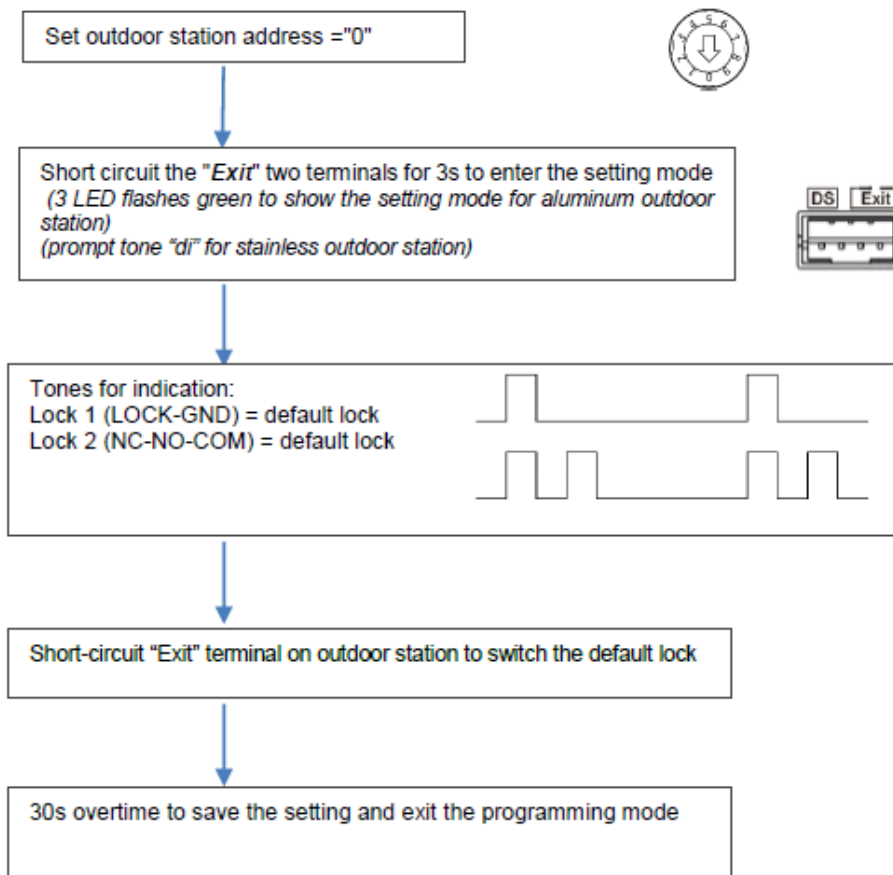

Unique solution ID: #1091

Author: Leo-Yangeng.Li

Last update: 2017-03-07 09:19