


# Outdoor Stations

## When users swipe the card at the outdoor station display module with card reader, which lock will be unlocked in Welcome M?

Default lock will be unlock when swiping card, you can also change default lock to

Change default lock  
Default lock can be set at either "Lock-GND" or "NO-NC-COM"  
1

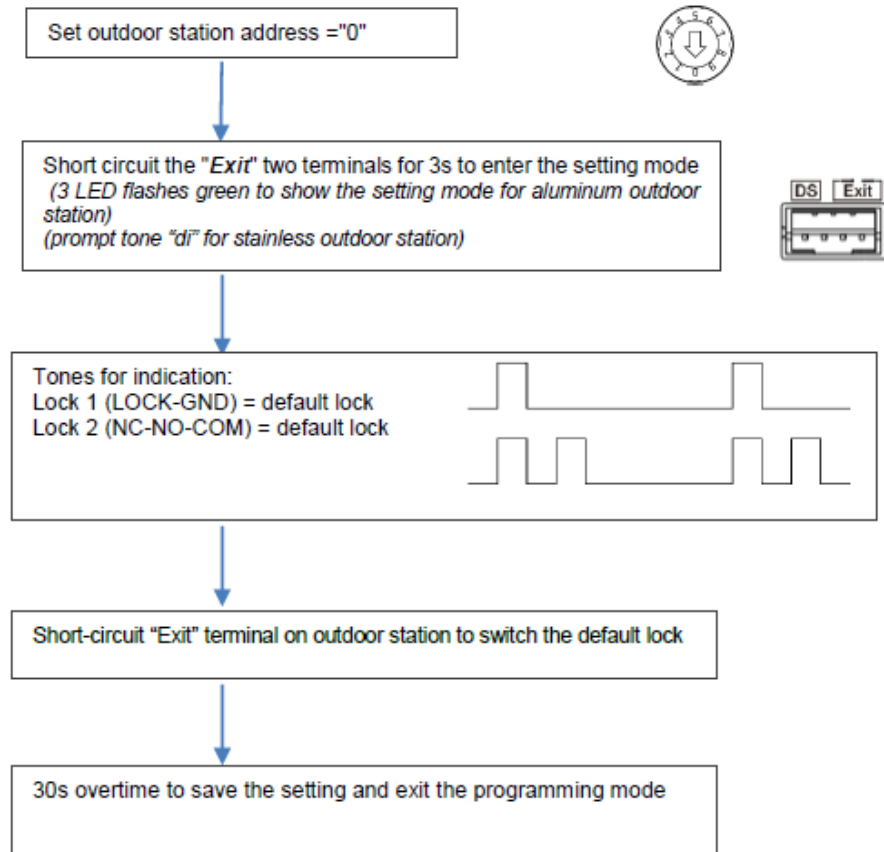

different type of lock.

Unique solution ID: #1098

Author: Leo-Yangeng.Li

Last update: 2017-03-07 09:39