

# DALI

## How can I measure the DALI voltage in the DALI-Gateways Basic DG/S x.64.1.1?

As a unique feature, the DALI-Gateways DG/S x.64.1.1 allows an accurate measurement directly with a multimeter on the DALI output.

The voltage varies normally due to the DALI communication. To avoid these disturbances and have an accurate measurement, you have to activate the manual operation via the manual button on the front of the device.

Voltage values at the DALI output should be (nominal voltage is 16 V DC):

DG/S 1.64.1.1: 9.5 V DC - 22.5 V DC (depending on the number of devices and wire length)

DG/S 2.64.1.1: 9.5 V DC - 22.5 V DC per output (depending on the number of devices and wire length)

Unique solution ID: #1389

Author: BA Engineering Team

Last update: 2024-10-29 08:42