

# DALI

## **DG/S x.64.5.1: What color temperature value is set when the “HCL function” is activated via the corresponding group object?**

The most recently received “HCL color temperature” object value is set when this function is activated for the first time or is reactivated. This value applies to all single ballasts and groups of the respective channel on which this function is active.

Unique solution ID: #1718  
Author: BA Engineering Team  
Last update: 2020-04-08 14:27