

# Visualisation, Display and Signalling

## **I have an uPnP device. On the local device page it is displayed correctly but I cannot select any uPnP devices/controls on my my.ABB-Livingspace configuration page?**

You need to click on the button "Load configuration". This process synchronises the local device with your my.ABB-Livingspace configuration.

Unique solution ID: #1149

Author: Ilija Zivadinovic

Last update: 2016-08-24 13:21