

# Commissioning and Configuration

## How to reset the free@home wireless devices (back to factory settings)?

### Factory Reset

1. deenergise the [free@home](#) wireless device
2. Press and hold the button at the bottom left
3. Energise the device again
  - The LED blinks slowly for 10 seconds, then quickly 5s and then goes off
  - The factory settings have been restored, and the device can be programmed again

**Note:** Devices that are already on factory state will not be reset again. The LED remains off in step 3.

Unique solution ID: #1153

Author: Ilija Zivadinovic

Last update: 2017-02-10 10:17