

Automation, Logic and Time Control

What can be the reason for a flashing ON-LED on the ABA/S 1.2.1?

1. During the initialization of the logic controller. This means that the stack is being started -> After about 60-90 sec. ON LED = ON
2. In case of a power failure (Stack is still saved) -> After that ON-LED = OFF
3. Lost KNX-BUS connection (Telegram LED = OFF)
4. Aborted download
5. After a factory reset

Unique solution ID: #1271

Author: Carolina Bachenheimer-Schaefer

Last update: 2016-11-21 15:35