

Automation, Logic and Time Control

ABA/S 1.2.1: The function „Counter“ does not count up. What is the reason for that?

After connecting the output of the counter (“V”) with a KNX-OUT the parameter “Threshold” has to be set >0. Then the function counts up to this defined threshold value.

Unique solution ID: #1272

Author: Carolina Bachenheimer-Schaefer

Last update: 2016-11-21 15:35