

# Automation, Logic and Time Control


## How to set the IP parameters of the ABA/S 1.2.1?

Both at ETS4 and at ETS5 the IP parameters has to be set in the properties of the Logic Controller under -> „IP“

By default, DHCP (obtain IP adress automatically) is set.


It is also possible to Use a static IP adress, if no DHCP server is available. This adress has to match the network topology.

ETS5:

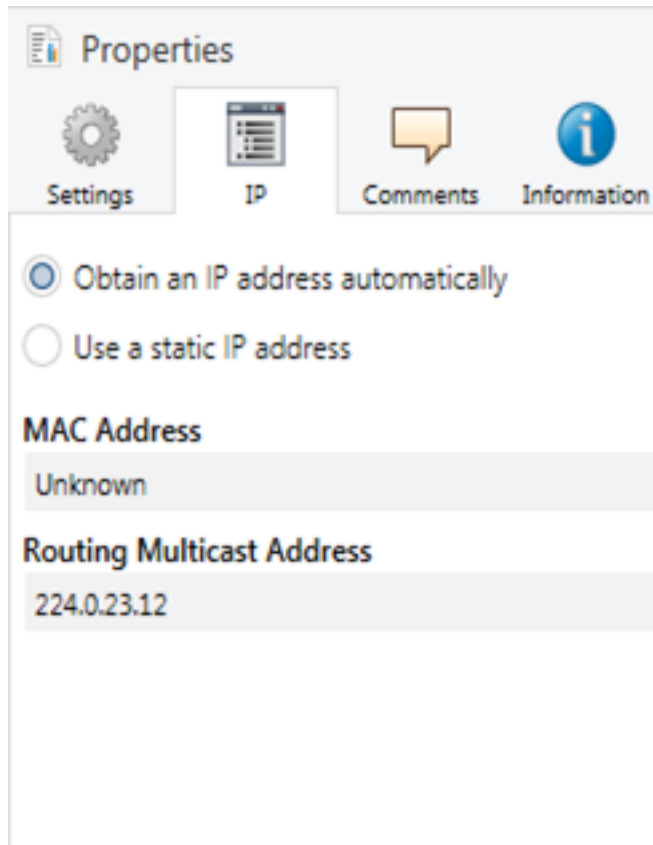

ETS4:

# Automation, Logic and Time Control

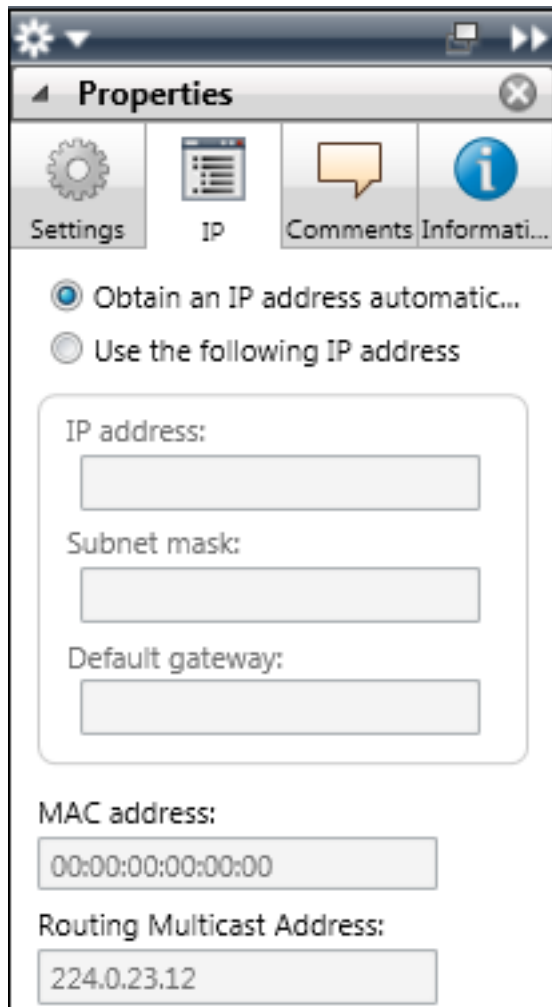

**Properties**

Settings IP Comments Informati...

Obtain an IP address automatic...  
 Use the following IP address

IP address:

Subnet mask:

Default gateway:

MAC address:

Routing Multicast Address:

Unique solution ID: #1275  
Author: Carolina Bachenheimer-Schaefer  
Last update: 2016-11-21 15:55