

Heating, Ventilation and Air Conditioning

Why does all error LED illuminate at the same time? ES/Sx.1.2.1

All error LED's "red" illuminate at the same time, because the external power supply for the outputs are missing. Please check the external power supply.

Unique solution ID: #1317

Author: Arno Reinmuth

Last update: 2016-12-15 09:49