

Heating, Ventilation and Air Conditioning

Can I mount the room temperature controller/CO2/humidity also in exterior walls or only in internal walls?

The mounting of the device should be effected in internal walls. Mounting the device on exterior walls may lead to impairment of the measurement.

Unique solution ID: #1382

Author: Carolina Bachenheimer-Schaefer

Last update: 2017-03-22 11:26