

# **Heating, Ventilation and Air Conditioning**

## **Can I connect conventional sensors to the universal inputs from the room temperature controller/CO2/humidity 5gang?**

The 5gang universal input is equipped with a screwed/plug-in terminal. For mounting the sensors, conventional push-buttons or external temperature sensors, you can use the terminal of the flush-mounted insert.

Unique solution ID: #1384

Author: Carolina Bachenheimer-Schaefer

Last update: 2017-03-22 11:26