

Heating, Ventilation and Air Conditioning

SUG/U 1.1: What is happening while the automatic mode for most of the split units?

In the majority of cases the split unit compares the setpoint defined by the user (KNX or remote) with the current room temperature. As a result it switches automatically between the modes "heating" and "cooling".

Unique solution ID: #1440

Author: Kevin Klemm

Last update: 2017-08-28 15:25