Heating, Ventilation and Air Conditioning SUG/U 1.1: What is happening with the presence function while an active forced operation?

If the forced operation is active and there is a presence detected the status for presence will be updated. The values for presence will be sent on the bus after the forced operation is deactivated.

Unique solution ID: #1442 Author: Kevin Klemm

Last update: 2017-08-28 15:39