

Heating, Ventilation and Air Conditioning

In case of using the Split Unit both for heating and cooling. How to switch between both modes when using the split unit gateway SUG/U 1.1?

It is possible to use automatic mode or to switch via 1 bit group object 'Simplified Mode' to change over from heating to cooling and vice versa. The Split Unit Gateway also supports the standard KNX DPT 20.105 (HVAC control mode, 1 byte group object called Operating Mode).

Unique solution ID: #1496

Author: Carolina Bachenheimer-Schaefer

Last update: 2017-09-20 10:39