

Heating, Ventilation and Air Conditioning

FCC/S 1.x.2.1: Why does the LED of an input on the membrane keyboard flash?

This could be an invalid measured value. For more information please have a look into the product manual. In this case the sensor, the cables and the settings in the ETS have to be checked.

Unique solution ID: #1574

Author: Marcel Feuerstein

Last update: 2018-07-05 12:02