

# Heating, Ventilation and Air Conditioning

## **FCC/S 1.x.x.1: Although the operation is enabled the fan stages in dependence of the control value do not switch. Why?**

In this case please check if the fan speed is manually set to a defined value on the analog room control unit.

Another possibility would be an active forced operation.

Unique solution ID: #1585

Author: Marcel Feuerstein

Last update: 2018-07-09 13:36