

# Heating, Ventilation and Air Conditioning

## FCC/S 1.x.x.1: What´s the purpose of the parameter “Send inactive control values cyclically”?

In a 2-pipe system switching between heating and cooling is triggered by a central unit. In these systems there is only one control value input for heating and cooling. If you activate this parameter the last value (active or inactive control value) will always be obtained on the input object.

For more information (with example) please see product manual chapter 7.5.1.3.

Unique solution ID: #1588

Author: Marcel Feuerstein

Last update: 2018-07-05 16:05