

Heating, Ventilation and Air Conditioning

FCC/S 1.x.x.1: Why is the control value 0% if basic load is active?

This depends on the parameters of the application. In default settings the control value for basic stage heating and cooling is set to 0%.

Unique solution ID: #1589

Author: Marcel Feuerstein

Last update: 2018-07-04 15:21