

Heating, Ventilation and Air Conditioning

FCC/S 1.x.x.1: What must be considered if analog room control unit is deactivated in the parameter “setpoint adjustment”?

Example:

Input a is set as window contact -> After that room control unit is activated in the setpoint adjustment. Right now “input a” is used as input for the control unit and not a window contact anymore. If room control unit is deactivated again (for any reason) “input a” is also set to window contact, again.

This is a feature of ETS!

Unique solution ID: #1590

Author: Marcel Feuerstein

Last update: 2018-07-09 14:06