

Heating, Ventilation and Air Conditioning

FCC/S 1.x.x.1: Is the basic load active if dew point and fill level alarm has triggered in cooling mode?

No! That would endanger the building. In this alarm state the basic load is off no matter what is parameterized or set via the bus. After the alarm has ended, the parameter / bus commands are executed again with bus commands also those that were set during the alarm.

Unique solution ID: #1591

Author: Marcel Feuerstein

Last update: 2018-07-04 15:25