## Heating, Ventilation and Air Conditioning Why does the HCC/S 2.x.x.1 neither control valve nor pump and the internal controller has no function?

The reason can be that the HCC/S has not received a valid supply flow temperature, yet. This is done either via a sensor at the physical input or depending on the ETS settings via a KNX communication object.

For more information, the status byte of the device can also be checked.

Unique solution ID: #1635 Author: Marcel Feuerstein Last update: 2019-02-12 11:08