

Heating, Ventilation and Air Conditioning

Why does the HCC/S 2.x.x.1 not send the status of the valve position during a valve purge?

The purge opens and closes the valve. However, the status represents the control coming from the controller, which does not necessarily change during a purge. Thus, the actual state of the purge cannot be shown on the keypad.

Please note: The LEDs of the valve on the membrane keypad represents the control coming from the controller. Whether the purge is actually running, for example, can be done on 0-10 V devices directly at the valve output.

Unique solution ID: #1645

Author: BA Engineering Team

Last update: 2019-02-13 11:42