

Heating, Ventilation and Air Conditioning

Does the display of the free@home RTC show the actual or the set temperature?

The display of the room temperature controller (RTC) always indicates the set-value temperature. The set-value can be changed via the arrow keys of the control element. The actual temperature can be seen in the app and the user interface.

Unique solution ID: #1068

Author: Lina Nord

Last update: 2017-02-10 14:21