

Heating, Ventilation and Air Conditioning

FCC/S 1.x.x.1: Although the operation is enabled the fan stages in dependence of the control value do not switch. Why?

In this case please check if the fan speed is manually set to a defined value on the analog room control unit.

Another possibility would be an active forced operation.

Unique solution ID: #1585

Author: Marcel Feuerstein

Last update: 2018-07-09 13:36