

Heating, Ventilation and Air Conditioning

AC/S 1.x.1: Which users are available after a factory reset or the first commissioning?

By default, after a factory reset or the first commissioning only the "admin" is released. The default password is "Admin123." The login datas can also be found in chapter 5.3 of the product manual.

[AC/S product manual](#)

Note: All other users will not be unlocked until you go into the settings within the DCA, set a new password, and store them. A final download is mandatory!

Unique solution ID: #1669
Author: BA Engineering Team
Last update: 2019-04-02 13:31